

How to make your cable connections:



frequency range	MHz	250-2340
insertion loss	dB	1
DC power pass	A	3,25
dimensions	mm	61x51x16

2 3

- 1=Trunk IN/To LNB
- 2=To power supply
- 3=Trunk OUT

Application injection of LNB power

